
RUBINE
ITALIA

CEILING FAN INSTALLATION MANUAL

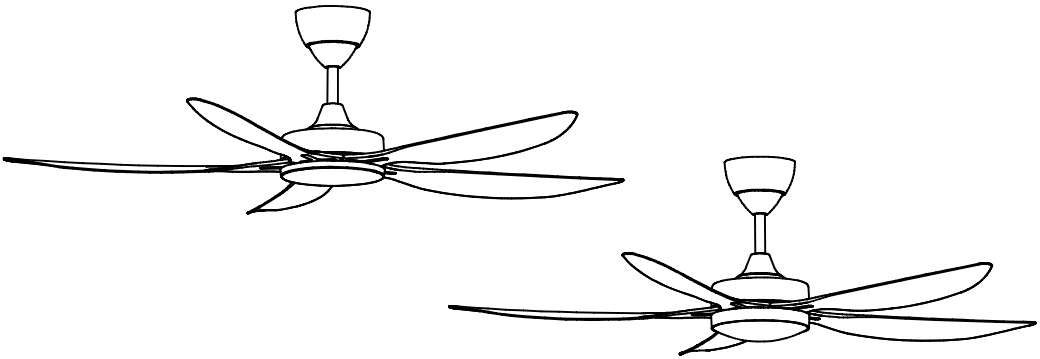

Thank you for purchasing our product.
Before operating this set, please read these instructions completely.

Use only with rated voltage 220-240VAC/50Hz.

Switch off power supply and wait until the blade is fully static, before cleaning or doing any maintenance jobs.


The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
Children should be supervised to ensure that they do not play with the appliance.


If unusual oscillating movement is observed, immediately stop using the Ceiling Fan and contact the manufacturer, its service agent or suitably qualified persons.
Can cause injury if Ceiling Fan drops.


The mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons.
Can cause injury if Ceiling Fan drops.


The replacement of parts of the safety suspension system device shall be performed by the manufacturer, its service agent or suitably qualified persons.
Can cause the injury of users or property damage.

Supplied Parts

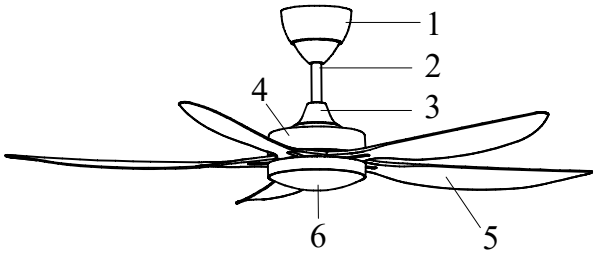

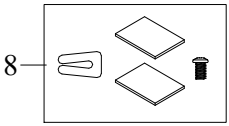

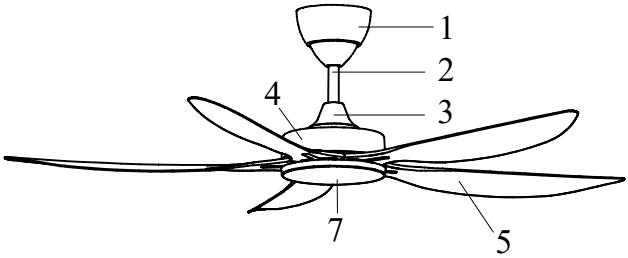

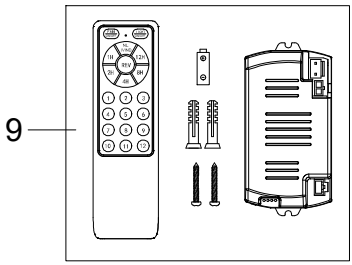


Item	Parts	QTY
1	Upper canopy	2 pcs
2	Downrod assembly	1 set
3	Lower canopy	1 set
4	Motor assembly	1 set
5	Blades(5PCS)	1 set
6	Light assembly (For light model)	1 set
7	Lower housing	1 set
8	Screw pack and balancing kit	1 set
9	Receiver & Remote control	1 set

How to Install the fan

The following steps will guide you to a successful installation

1. Downrod & lower canopy installation
2. Fan body installation
3. Ceiling fan assembly installation
4. Safety cable installation
5. Connecting the power supply
6. Upper canopy installation
7. Blades installation
8. Light kit & lower housing installation

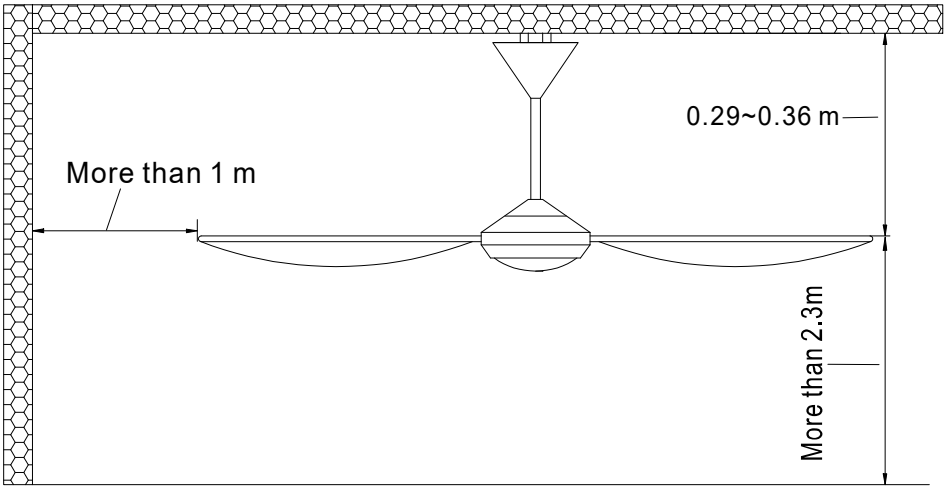

WARNING

Ceiling fan must be mounted above 2.3 m from the floor and 1 m from the wall to the blade

Install Downrod

1.Remove cotter pin,nut,washer,bolt & coupler from downrod assembly.

2.Insert the upper canopy and lower canopy to downrod assembly unit.


3. Insert the downrod assembly to motor set.

4. Fix and firmly tighten the bolt, washer, nut,then insert the cotter pin.

5. Put up and down the canopy set, then tigten with screw.


WARNING

Cotter Pin must insert into Bolt and Bent.

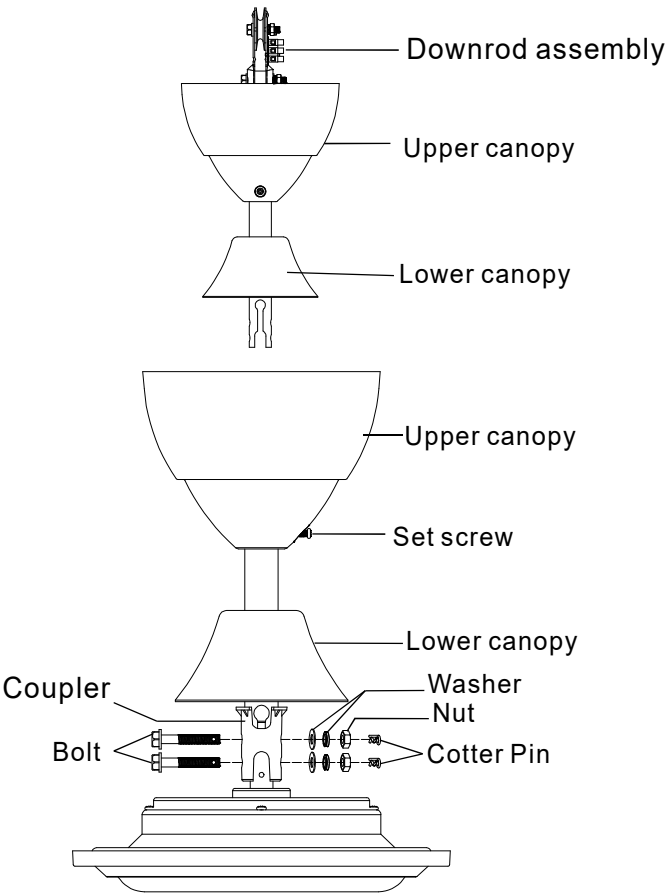

Install Fan Body


1. Remove the supplied bolt , washer, nut , pulley and cotter pin from the top portion of downrod.

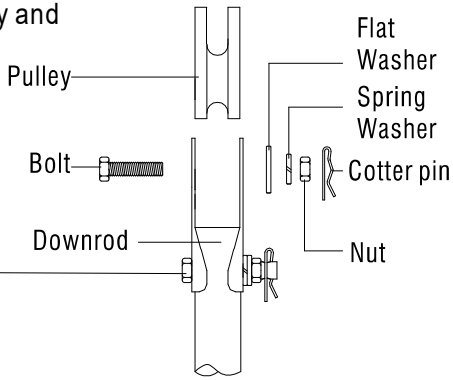

WARNING

This Bolt must be firmly tightened .


2. Place the pulley onto the hook .

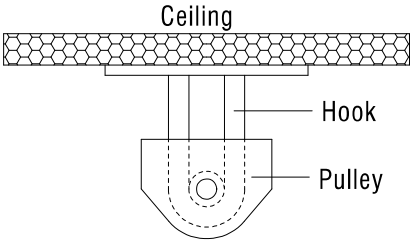

WARNING

Ensure Hook can afford more than 10 times the ceiling fan weight

3. Fix and firmly tighten the previous bolt, washer, nut and cotter pin.

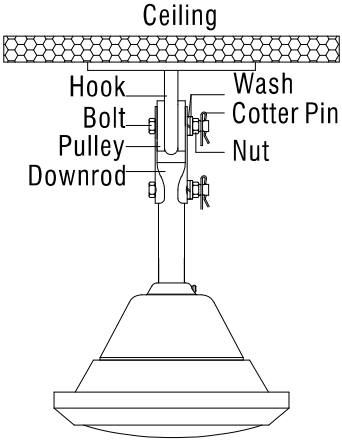


WARNING


Cotter Pin must insert into Bolt and Bent.

Install Safety Cable


1. Remove the safety cable screw from the downrod(Stp.1)

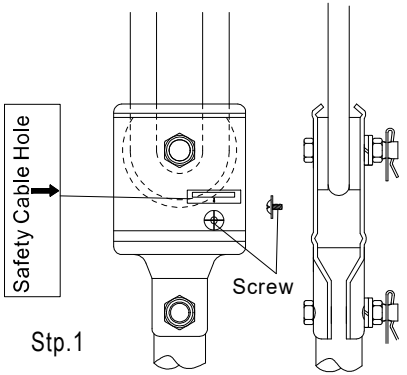

2. Arrange and tie the safety cable(Stp.2)

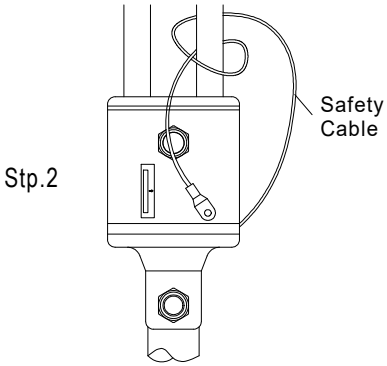


3. Firmly screw the safety cable onto the downrod(Stp.3).

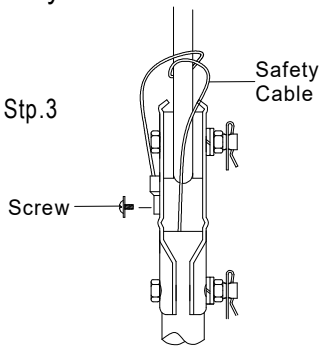

Connecting The Power Supply

Only direct connection to wall allowed. Please refer to figure below.

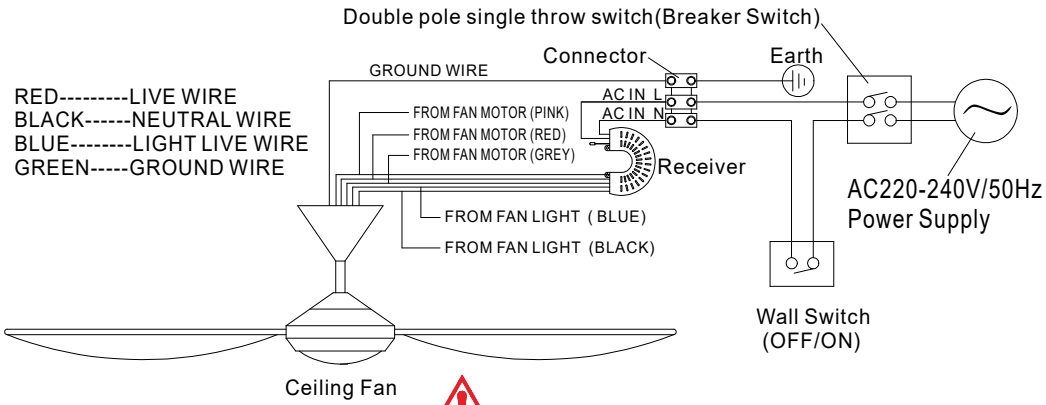


WARNING

This product is not provided with cord and plug or with other means for disconnection from the supply. When connect or change the power cord lead wire, it must be performed by qualified personnel in order to avoid a hazard. Please use wire thickness of cross section 1mm^2 or above.

Install Canopy

Raise the upper canopy and tighten it with the set screw .
Be sure the upper canopy is 10mm from the ceiling

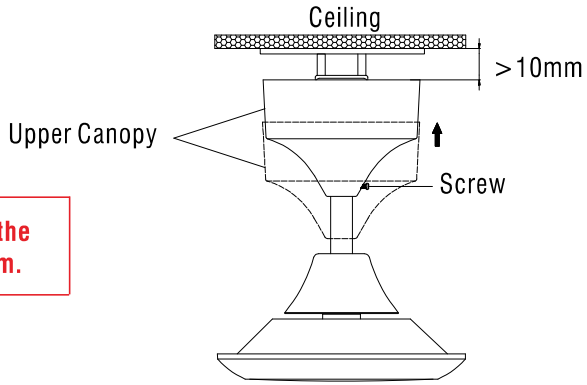


WARNING

Distance of Upper Canopy from the Ceiling must be more than 10 mm.

Install Blades


1. Tighten the blades with screws provided. Each Blade uses 2 pieces of screw .

2. Ensure the screws for securing the blades are tightly screwed.

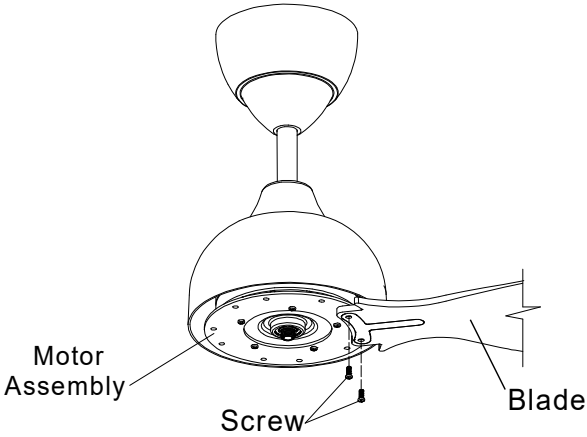


Install lower housing(or light cover)

Put on the lower housing (or light assembly) into the fan,turn right to lock it.

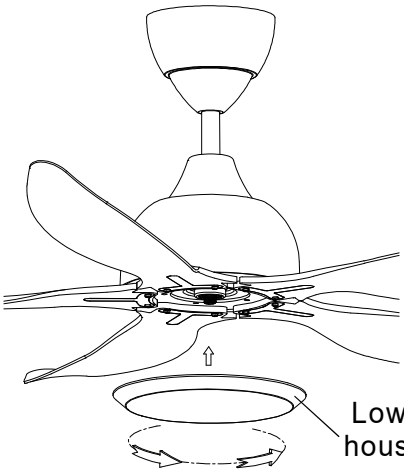


FOR WHITHOUT LIGHT MODEL

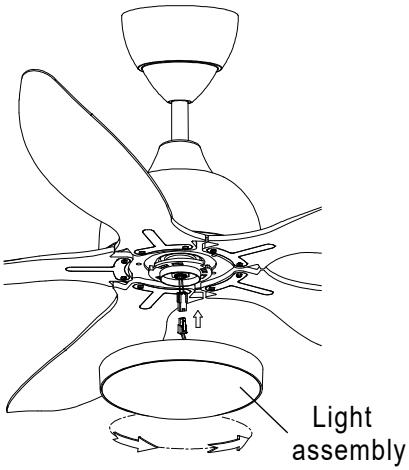


FOR LIGHT MODEL

Install Remote Control Holder

Fix the Remote Control Holder to wall as figure below.
The Wall Plugs are not needed for wooden walls.

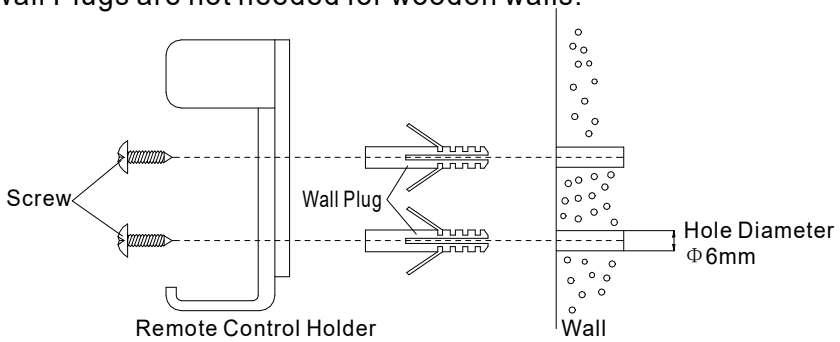

How To Use Remote control

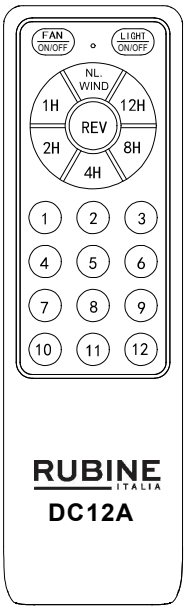

FAN BUTTON
Turn ON / OFF ceiling fan

LIGHT BUTTON
Turn ON / OFF light. (Only for light model)
Press light ON/OFFbutton continues 3s to change 3 types of light tone.

SPEED BUTTON
Turn on at 1-12 speed
*The fan will resume operation at the last speed setting before power off.


NL.WIND BUTTON
This function will give the effect of natural wind blowing.
(The fan will automatically increase speed from speed low to high speed every 10 seconds and from high speed back to low speed. Pressing this button again will cancel this function)

REV BUTTON
Set up ceiling fan to forward or reverse

TIME OFF BUTTON
Set up the time turn off the fan after 1Hr / 2Hr / 4Hr / 8Hr / 12Hr

STEPS FOR LEARNING CODE : (REMOTE CONTROL PAIRING)
Leaning code matching mode is used between emitter and receiver. Turn "ON" the supply power within 30 seconds and press the "TURBO" button for 5 seconds. After hearing a long sound "bee",which means pairing is successfully and it can works normally.
(**NOTE**: Learning mode is not accepted after turn"ON" the supply power for 30 seconds.)

Remote Control Coverage

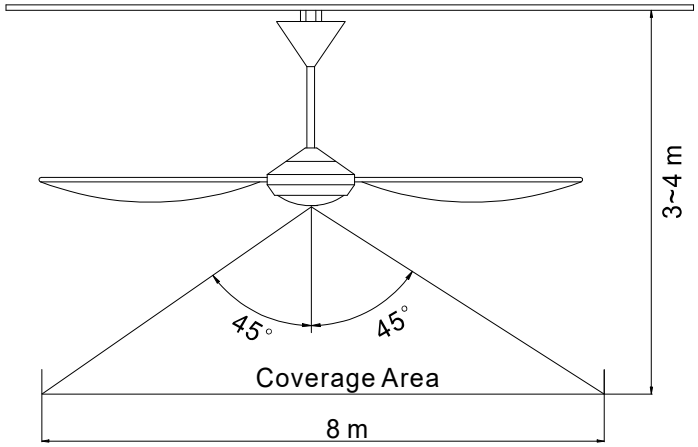

The figure shows the best coverage area. The ideal ceiling height is 3~4m.

How To Use The Balancing Kit


If the fan encounter wobbling during operation.
Do the following steps to solve the problem.

1. Tighten all screws.

2. Unscrew the blades and fix them back at different combination of position on the motor.

3. Measure the level between the ceiling and all blades.

4. Use the blade balancing kit provided if the fan still wobbles.

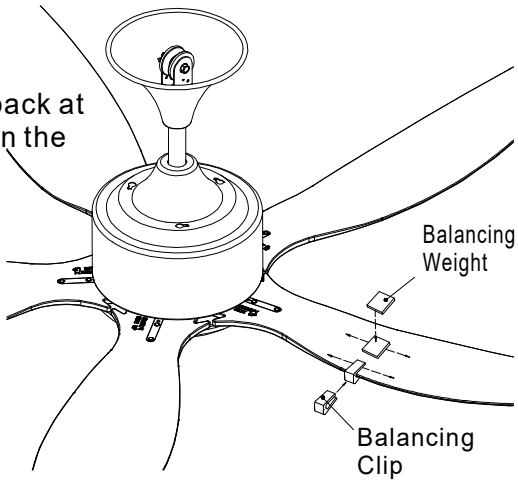

Maintenance

Due to fan natural movement, connections may get loose after a period of usage. To ensure a proper and safety usage is highly recommended to inspect and tighten all connections in every 6 months.

CLEANING

Clean your fan periodically to maintain its new appearance. Basic cleaning procedures are as follows:

1. Use only lukewarm water, do not use detergent, corrosive or acidic solution.
2. Damp the cloth lightly . Use only soft or lint-free cloth to clean the fan. Rough fabric will scratch the surface.
3. Apply a thin coat of furniture polish to the wooden blades will protect and enhance the appearance.
4. To cover small scratches, apply a light coat of shoe polish over it
5. There is no need to oil the fan.

Troubleshooting

Check on the following before lodging a service report

PROBLEM	CAUSE	SOLUTION
Fan not moving	Main cables not connected	Check mains and branch circuit breakers or fuseed
	Wire connection loose	Check the line wires connections to the fan and switch housing
Fan noisy	Housing screws are loose	Tighten all screws
	Wire and nut connections rattles against each other	Separate and store neatly the wire connections from the nut
	Canopy touches the ceiling	Check that the canopy is not touching or too close to the ceiling
Remote Control not working	Remote and receiver code differen	Refer page 9, repairing the remote learning code
	Battery not installed	Install the remote control battery
	Weak battery	Change a new battery

Customer Service Centre

If you need any technical assistance or to report a fault, please contact our customer service centre at:

FIAMMA TRADING SDN. BHD. 330476-P(*Amember of fiamma Holdings Berhad*)

Lot 13, Jalan E1/5, Taman Usaha Ehsan, Kepong,
52100 Kuala Lumpur, Malaysia.

Tel : 03-6279 8899
Fax : 03-6279 8682

Website : www.rubine. com.my

WARNING

Ceiling fan are not recommended to be installed directly above heating area, such as stove, oven, hot plate and others. This will shorten the lifespan due to direct heat and oil cause by cooking.

Specifications,T40			
VOLTAGE	FAN POWER	LIGHTING POWER	SIZE OF FAN
220-240V~50Hz	40 watts	18 watts	1400mm
220-240V~50Hz	40 watts	/	1400mm

*ALL MEASUREMENTS ARE APPROXIMATE